ASSEMBLY MANUAL – COMPUTER SOCKETS

The manual concerns the following types of sockets:

Series	Symbol of the product
DECO	DGK-1e, DGK-3, DGK-5, DGK-2, DGK-4, DGK-6, DGTK
FLEXI	FGK-1e, FGK-3, FGK-5, FGK-2, FGK-4, FGK-6
TREND	GK-1e, GK-3, GK-5, GK-2, GK-4, GK-6
LOGO	LGK-1e, LGK-3, LGK-5, LGK-2, LGK-4, LGK-6

Assembly manual on the example of the screen socket RJ45 (when it comes to a non-screen socket proceed in the same manner):

- 1. Prise the clasps from both sides and open the module (Photo no. 1).
- 2. Remove the plastic cap with markings of the ways of assembly: A or B (Photo no. 2).
- 3. Strip insulation of the wire and leave 1 cm screen (Photo no. 3).
- 4. Lead the stripped wire through the plastic cap, leaving screen (Photo no. 4).
- 5. Pull the cords of the wire through notches of the plastic cap, keeping suitable colour of the chosen connection standard A or B (Photo no. 5).
- 6. Cut the projecting ends of the cords (Photo no. 6).
- 7. Insert the plastic cap into the module following the arrows directions both on the cap and on the module (Photo no. 7).
- 8. Close the module. This way the cap shall be pressed automatically (Photo no. 8).
- 9. Press the screen of the wire to the module casing with the cable tie and block it (Photo no. 9).

Photo no.1





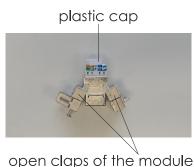


Photo no. 2

 



Photo no. 3



Photo no. 4



 Photo no. 5





ASSEMBLY MANUAL – COMPUTER SOCKETS

Photo no. 6



Photo no. 7



arrow on the cap
arrows on the module



Photo no. 8





Photo no. 9



NOTE!

Assembly shall be held by a suitably qualified person with deactivated voltage and shall meet the national safety standards